



Quick Installation Guide

ENR-2000 Series

Quick Installation Guide

ENR-2000 Series

BEFORE YOU START

Thank you for purchasing ACTi ENR-2000 Standalone Network Video Recorder. This guide contains all the information you need to quickly setup ACTi ENR server system via local display interface. For detailed instructions on installation or operations, please refer to System Administrator's Manual or User's Manual on ACTi corporate website.

The items below are prerequisite for installation:


- Monitor (1080p, HDMI input) with HDMI cable
- RJ-45 network cable ● Network Switch ● USB mouse ● USB keyboard (Optional)
- At least one certified 3.5-inch SATA hard disk for recording. Please use the hard disks ACTi tested to be compatible with ENR-2000. You may find the certified models in ACTi Certified HDD List for Standalone Network Video Recorders via <http://www.acti.com/hdd>

01 UNPACK


The package includes the following items:

- ENR server x1 ● Power Cord x1 (Adapter type varies by region)
- Accessories ● Warranty Card x1 ● Quick Instalation Guide x1

02 AT A GLANCE

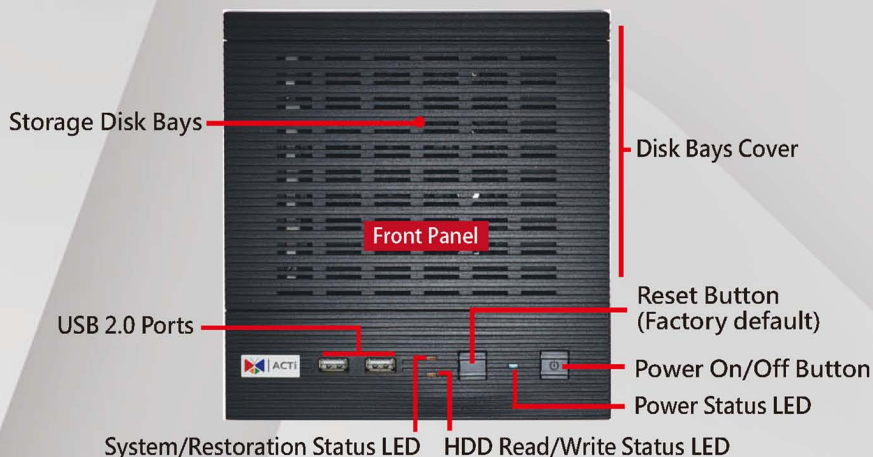


03 AT A GLANCE

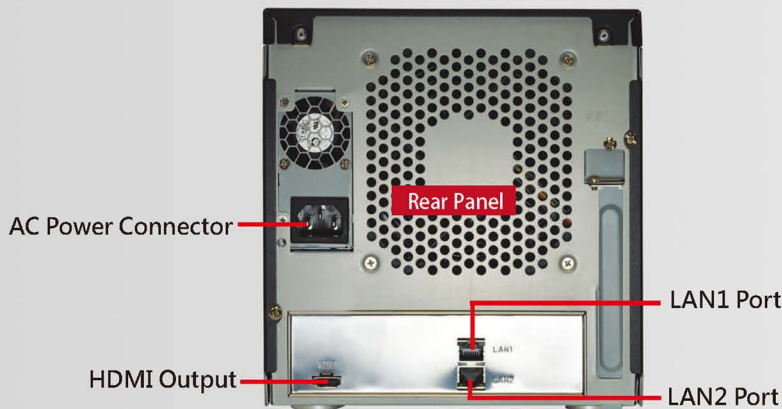

04 HARD DISK INSTALLATION

TURN OFF THE DEVICE, Open the front cover, repeat the following steps to install the hard disks into the disk bays below.

Storage Disk Bays

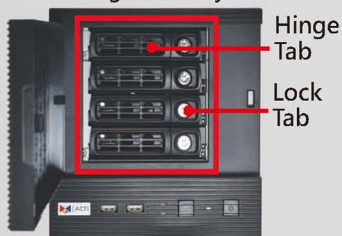

Mount The Disk

Step 3

Mount the disk by locking it with supplied disk screws to the bottom of the tray.



Remove The Tray

Step 1

Slide the **Lock Tab** to the right, the **Hinge Tab** will pop out by itself.



Step 2


Pull the **Hinge Tab** to 90 degrees from the front, pull out the tray.



Install The Tray

Step 4

Press on **Lock Tab**, push the tray into the bay until it stops.

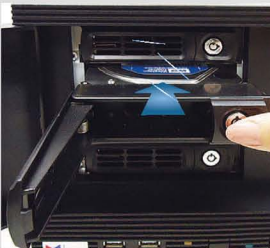


Step 5

Press on the **Hinge Tab** until it clicks into place.



05 CONNECTIONS

The diagram below demonstrates a connection setting example using **LAN 1 Port** to connect network cameras within local network and **LAN2 Port** for another network.

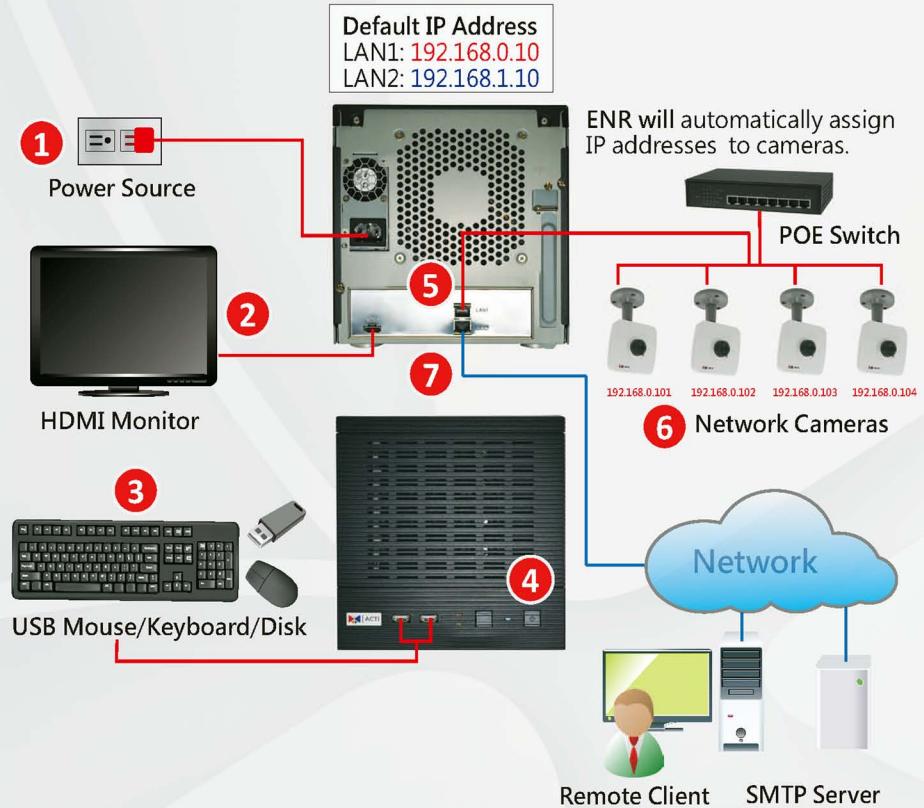

Follow the procedures to connect the devices. These devices are supposed to get connected in the sequence shown below:

1. Plug the power adapter into ENR and electricity outlet.
2. Connect the HDMI monitor.
3. Connect the USB devices.
4. Press down **Power Button**. The power status LED will turn solid blue.
5. Attach the network cables to **LAN1 Port**.
6. Connect the network cameras to the switch and power them on.
7. Attach the network cables to **LAN2 Port** . (optional, required for the access to another network)

06 LOGIN

ENR2000

Account

Password

Language

☐ Remember me

☐ Auto login

On Login window, input Account and Password with virtual keypad, and then click “Login”.

Account : **admin**

Password : **123456**



Numeric Keypad

Enter

07 FORMAT DISKS

ACTi
Connecting Vision

Welcome to the HDD setup wizard

Storage Device

SATA-1 ST3000VX000-9YW1

SATA-2 ST2000VX000-9YW1

Storage Information

Capacity: 2794.51 GB

Used: 0.00 GB

Free: 0.00 GB

File System:

Recording: NO

On HDD setup wizard window, select the unformatted disk and click “Format”. Repeat this step to format the other disks, and then click “OK”.

08 ADD CAMERAS

ACTi
Connecting Vision

Welcome to the camera setup wizard
please use Auto Add or Manual Add to setup IP Cameras

Search and Add Cameras Automatically

Account/Password for accessing camera(s)

Account


Password

On camera setup wizard window, click “Auto Add”, input the Username and Password to access the cameras, and they will be added to the system.

Technical Support


If you have any questions during system installation, please feel free to contact our engineers via our Customer Help Desk platform <http://www.acti.com/CHD> or US/Canada toll-free number: 1-866-410-2284 (ACTi)

09 CHECK LIVE VIEW

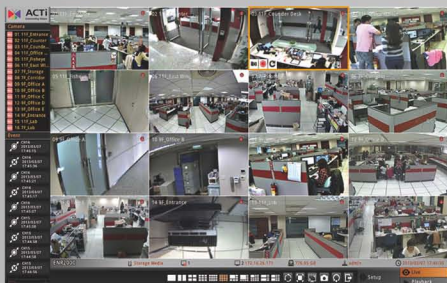

After the cameras are added, you will immediately see live streams on **Live** screen.

- To take a snapshot, select the channel and then click .
- To view a single channel in 1x1 layout, double-click on the channel.

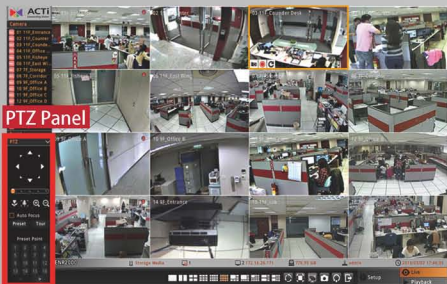


To validate PTZ operations:

- (1) Select a PTZ camera channel.
- (2) Click **PTZ**  in the bottom left corner to open PTZ panel, and use the on-screen buttons to manipulate the camera.

The number of maximum supported live view channels will vary by ENR models.

10 CHECK RECORDINGS

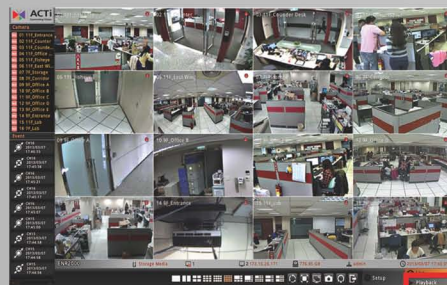

On **Live** screen, click  **Playback** in the bottom right corner to enter **Playback** screen.



On the time bar, drag the current-time indicator to your desired position, and click  on **Playback** control panel to play.

To export video, select the channel and then click .