

# How to Upgrade ZNR Firmware

## Introduction

---

The ZNR firmware can be upgraded through local upgrade or web-based upgrade. Either way, download first the latest firmware from ACTi.com and extract the zip file.

## Local Upgrade

---

1. Save **Program.bin** file in a USB flash drive and then connect the USB drive to the ZNR.
2. Go to **Menu > Maintenance > Upgrade > NVR Upgrade**.
3. Choose **Local Upgrade**.
4. Select **Program.bin** file in the USB flash drive, then click **Upgrade**.

The device will automatically restart after the upgrade is complete.

## Web-Based Upgrade

---

1. Access ZNR from a web browser.
2. Go to **Setup > Maintenance > Maintenance > NVR Upgrade**.
3. Click **Browse**.
4. Locate the **Program.bin** file, then click **Upgrade**.

The device will automatically restart after the upgrade.

Live View Playback Setup Smart

Client System Camera Hard Disk Alarm Alert Network User Maintenance

Maintenance Diagnosis Info NVR Upgrade IPC Upgrade

Model NVR

Serial No. 210235XB523216000001

Firmware Version NVR-B3610.32.18.C09712.241107

Local Upgrade C:\fakepath\Program.bin Browse Upgrade

Cloud Upgrade Check for Update

Note: Do not disconnect power or perform any other operation during upgrade.

Log HDD Online User Network Camera Recording Packet Capture Maintenance One-Click Collect