



# Quick Installation Guide

Desktop Standalone NVR

ENR-140

# BEFORE YOU START

Thank you for purchasing ACTi ENR Standalone Network Video Recorder. This guide contains all the information you need to quickly set up ACTi ENR server system via local interface.

For detailed instructions on installation, operation or how to log in to ENR as a web client, please refer to the product manuals provided on ACTi corporate website.

The items below are prerequisite for installation:

- Network cameras
- RJ-45 network cables
- Network switch
- Monitor (1080p, HDMI input) with HDMI cable
- USB mouse
- At least one ACTi-certified 3.5-inch SATA hard disk.


You may find the certified disk models via this link: <http://www.acti.com/hddselector>

## 01 UNPACK


The package includes the following items:

- ENR x 1
- Power cord x 1
- Adapter converter x 1
- Hard disk screw pack x 1
- USB mouse x 1
- Warranty card x 1
- Quick installation guide x 1

## 02 AT A GLANCE

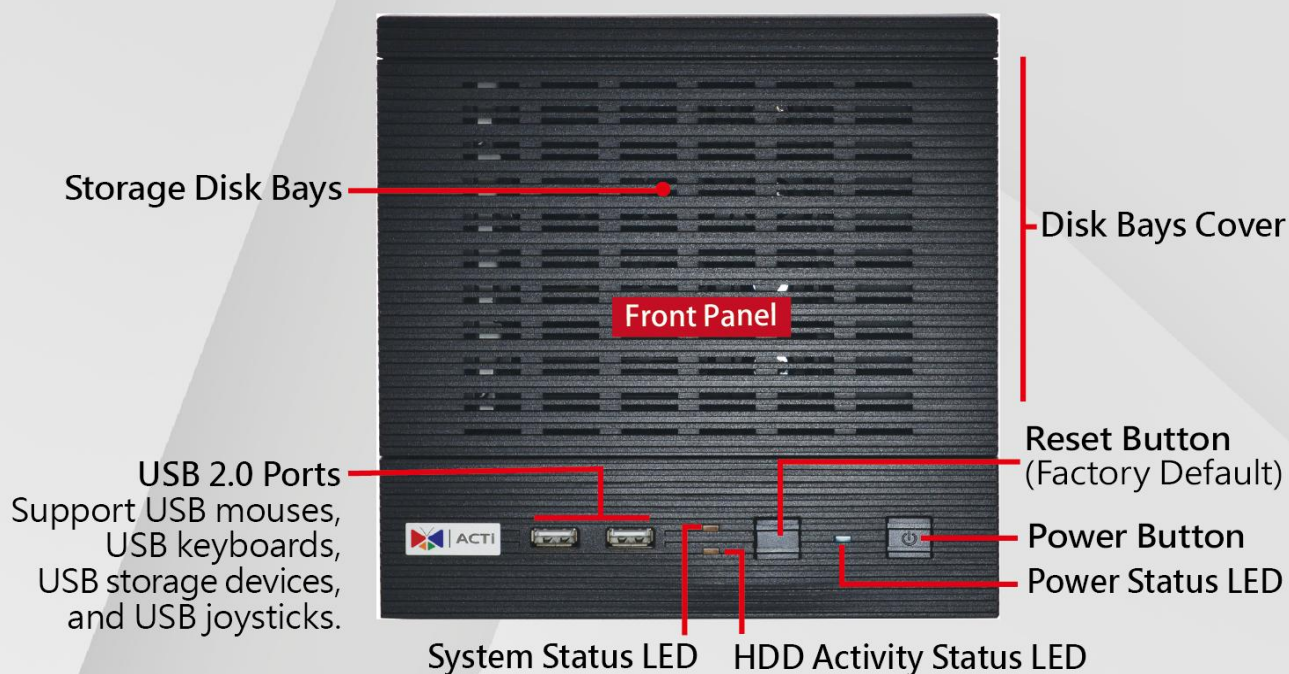


## 02 AT A GLANCE

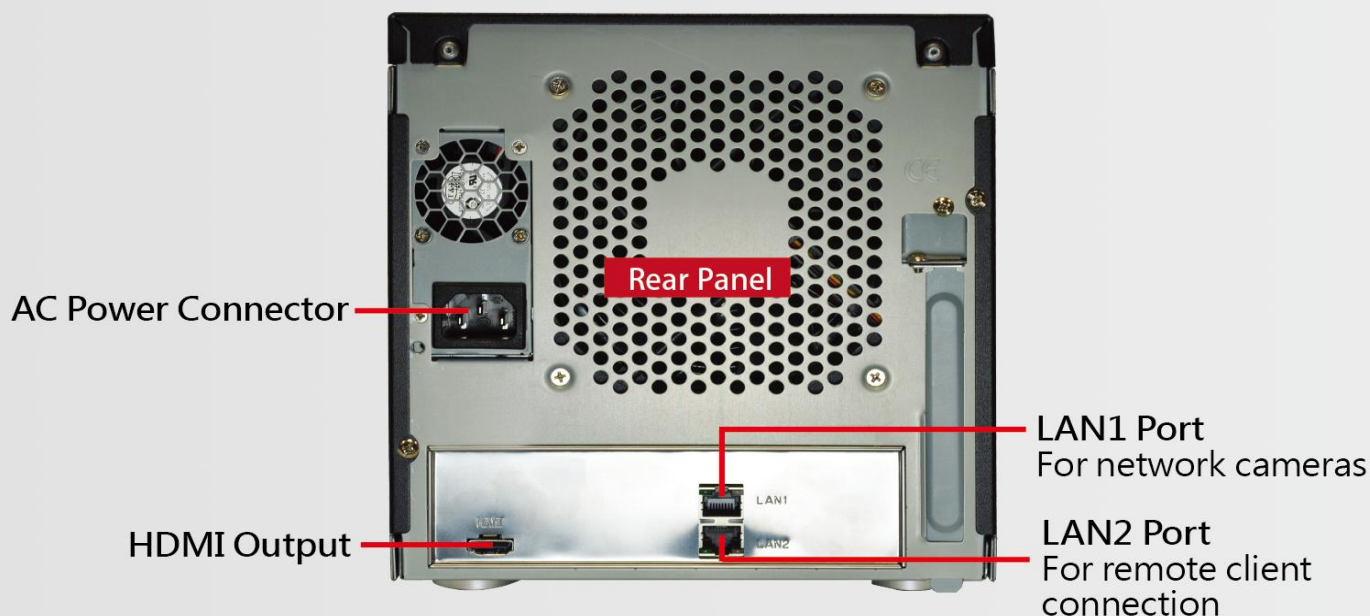

## 03 HARD DISK INSTALLATION

TURN OFF THE UNIT, open the front cover, repeat the following steps to install the hard disks into the Storage Disk Bays.

### Storage Disk Bays

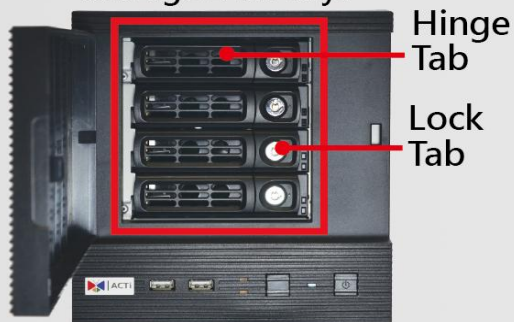

### Remove the Tray

**Step 1**  
Slide the **Lock Tab** to the right, the **Hinge Tab** will pop out by itself.



**Step 2**  
Pull the **Hinge Tab** to 90 degrees from the front, and pull out the tray.



### Mount the Disk

**Step 3**  
Mount the disk by locking it with supplied disk screws to the bottom of the tray.



### Install the Tray

**Step 4**  
Press on **Lock Tab**, push the tray into the bay until it stops.




**Step 5**  
Close the **Hinge Tab**.



## 04 CONNECTIONS

The diagram below demonstrates a connection setting example using **LAN1** to connect network cameras within local network and **LAN2** for another network.

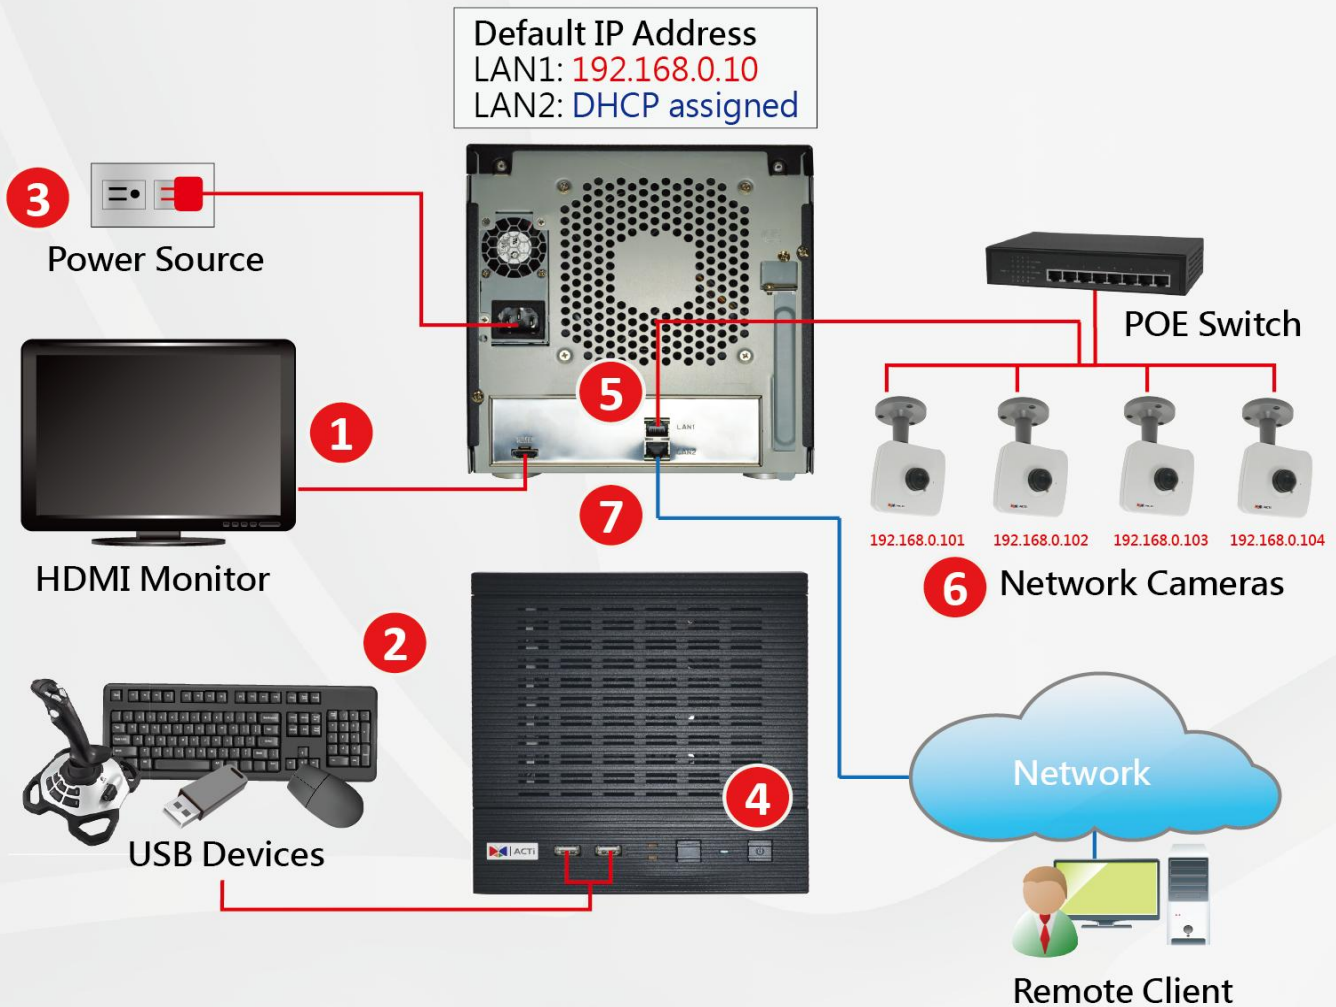

Follow the procedures to connect the devices. These devices are supposed to get connected in the sequence shown below:

1. Connect the HDMI monitor.
2. Connect the USB devices.
3. Plug the power adapter into ENR and the electricity outlet.
4. Press down **Power Button**, and the power status LED will turn solid blue.
5. Attach the network cables to **LAN1** port.
6. Connect the network cameras to the switch. ENR will automatically assign IP addresses to these cameras via **LAN1** port.
7. Attach the network cables to **LAN2** port (optional, required for remote client connection from another network).

## 05 LOGIN




On Login window, input **Account** and **Password** with virtual keypad, and then click “Login”.

- Account : **admin**
- Password : **123456**



## 06 FORMAT DISKS

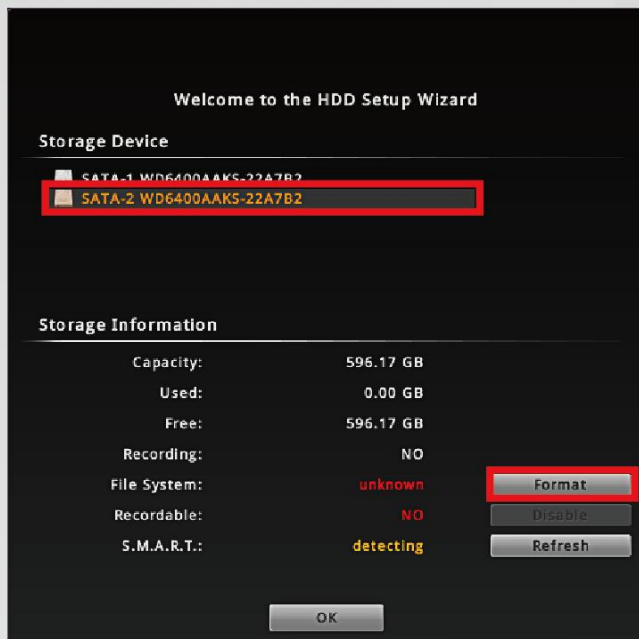

On HDD Setup Wizard window, select the unformatted disk and click “Format”. Repeat this step to format other disks, and then click “OK”.

## 07 ADD CAMERAS




On Camera Setup Wizard window, click “Auto Add”, input the **Account** and **Password** to access the cameras, and they will be added to the system.

## Technical Support

If you have any question during system installation, please feel free to contact our engineers via:

- Customer Help Desk platform: <http://www.acti.com/CHD>
- US/Canada toll-free number: 1-866-410-2284 (ACTi)

## 08 CHECK LIVE VIEW

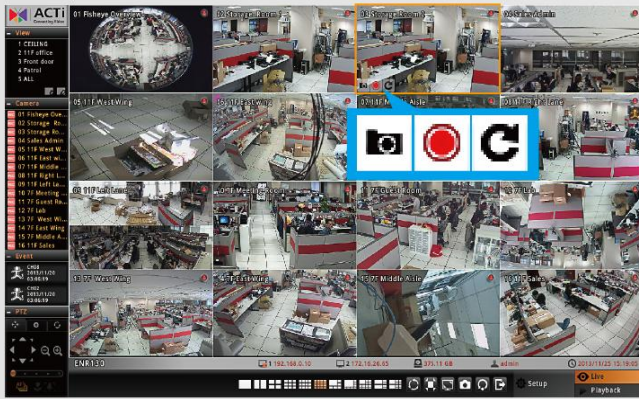


After the cameras are added, you will immediately see live streams on Live View screen.


- To take a snapshot, select the channel and then click .
- To view a single channel in 1x1 layout, double-click on the channel.

To validate PTZ operations:

- (1) Select a PTZ camera channel.
- (2) Click **PTZ**  in the bottom left corner to open PTZ panel, and use the on-screen buttons to manipulate the camera.

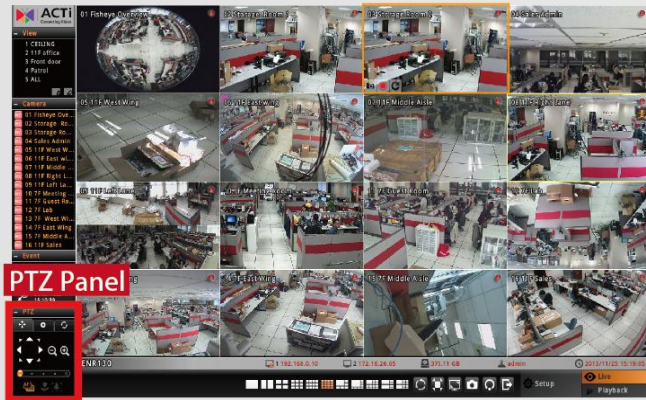

## 09 CHECK RECORDINGS

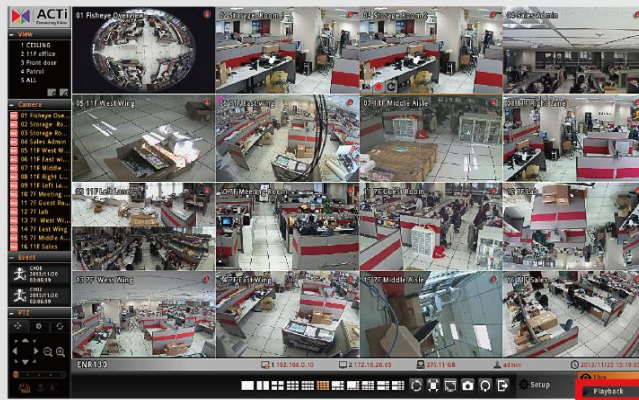

On Live View screen, click **Playback** in the bottom right corner to enter Playback screen.



On the time bar, drag the current-time indicator to your desired position, and click  on Playback control panel to play.

To export video, select the channel and then click .