



ACTi
Connecting Vision


Quick Installation Guide



R61C-30

R61C-10

Device Overview

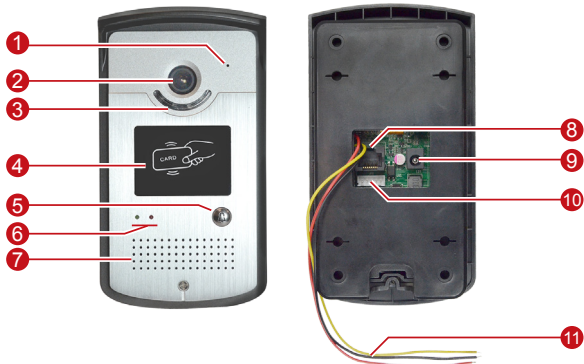

- | | | | |
|---|------------------|----|--|
| 1 | Microphone | 7 | Speaker |
| 2 | Camera Lens | 8 | Ethernet Port |
| 3 | IR LEDs | 9 | DC 12V Input |
| 4 | RFID Card Reader | 10 | Digital Input / Output |
| 5 | Push Button | 11 | Wiegand connection
<i>(available only on R61C-10)</i> |
| 6 | LED Indicators | | |
- Green: Power and Network status
Red: Ring and Call status

This guide contains the basic information you need to quickly setup the Device.

For full documentation, please refer to the User Manual downloadable from the website.


Step 1: Unpack the Device

Check the package and make sure all items are present.


- Device
- RFID card (1)
- DI/DO cable
- Fixing screw

Step 2: Mount the Device Housing


1. Select a location and drill a rectangular hole with dimensions 80 x 140 mm on the wall.

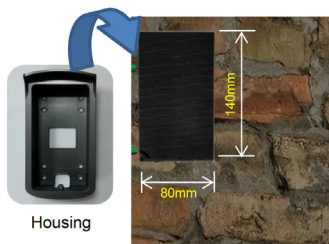


2. Mount the device housing through the rectangular hole and secure the housing on the wall.

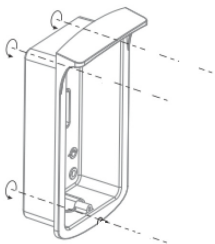

Step 3: Connect the Cables

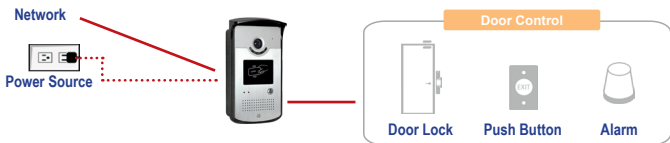

1. Connect the Ethernet cable to the Device. If using a non-PoE switch, connect a power adapter (sold separately).
2. Wire and connect input / output devices to the bundled DI/DO cable connector. Map the cables as below:

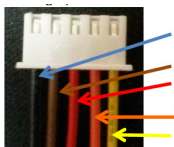


<i>Wire Color</i>	<i>DI-DO</i>
Black	Normal Open (NO)
Brown	COM
Red	Normal Close (NC)
Orange	DI-
Yellow	DI+

3. Connect the DI/DO cable connector to the Device.



4. Mount the Device to its housing and attach the bundled fixing screw to secure the unit.

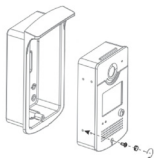

Step 4: Access Web Configuration

1. Open a web browser and type the device IP address on the URL bar.

Note:

The default network settings of the Device is DHCP. If DHCP network is not available, use the default IP address: **192.168.1.100**.

2. Enter the user name and password.

Default

User name: **admin**

Password: **admin**

3. Click the menu items on the left of the page to access and modify the device settings.



For full documentation, please refer to the User Manual downloadable from the website.

ACTi Connecting Vision and its logo are registered trademarks of ACTi Corporation.

All other products or company names mentioned in this document are trademarks or registered trademarks of their respective owners.

Copyright © 2018, ACTi Corporation All Rights Reserved